



3651 N Highway 89 • Chino Valley, AZ 86323  
 (928) 636-7080 • www.p-a-g.net

**JEEP WRANGLER /  
 RUBICON (TJ / YJ)  
 JEEP UNLIMITED (TJL)  
 ROCK SLIDER REAR BUMPER  
 INSTALLATION INSTRUCTIONS  
 1987-2006 KIT # 83100**

**⚠ WARNING**  
 Read and understand all instructions, warnings, cautions, and notes in this sheet and in your owner's manual before you install this kit.

**⚠ WARNING**  
 The Jeep Wrangler is rated as a Class I tow vehicle. See owner's manual. The kit **bumper** is equipped with a 2" receiver for vehicle recovery purposes. The kit **bumper** is NOT rated for towing.


**Before starting installation**

**⚠ NOTE**  
 Kit parts are prefaced by the word **kit** and appear in **bold print**.


1. Carefully read all warnings and instructions completely before beginning.
2. Verify all parts have been received in this kit by checking the parts list at the end of this document.
3. **Only install this kit on the vehicle for which it is specified.** If anytime during the installation you encounter something different from what is outlined in the instructions, call technical support at (928) 636-7080.
4. Park the vehicle on a clean, dry, flat, level surface and block the tires so the vehicle cannot roll in either direction.

**Install kit**

1. Stock bumper
  - a. Remove bolts securing stock bumper to bottom of frame. If equipped with tow hooks, remove additional bolts and tow hooks.

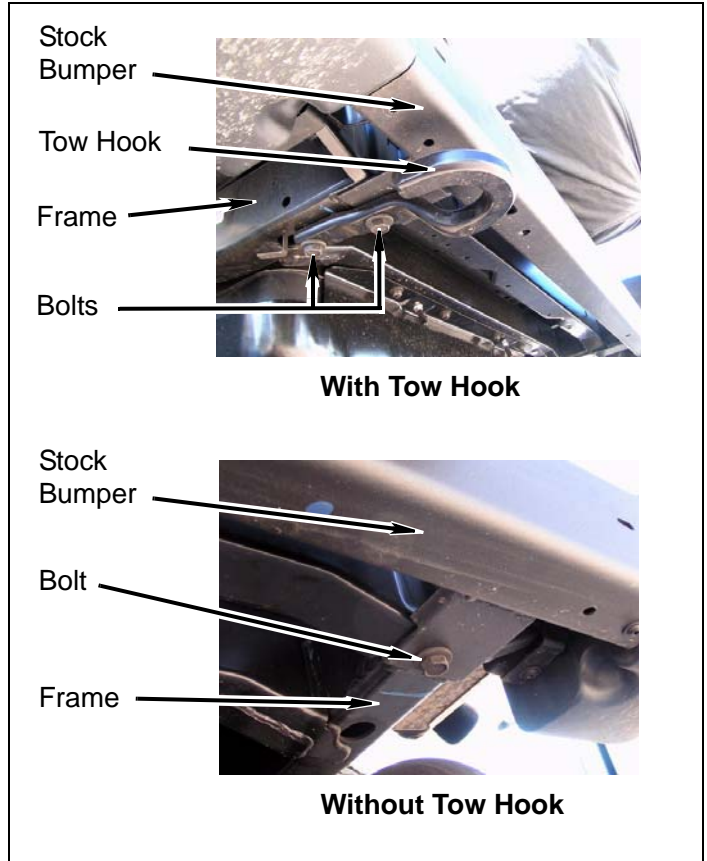


- b. Remove four nuts and stock bumper from frame.

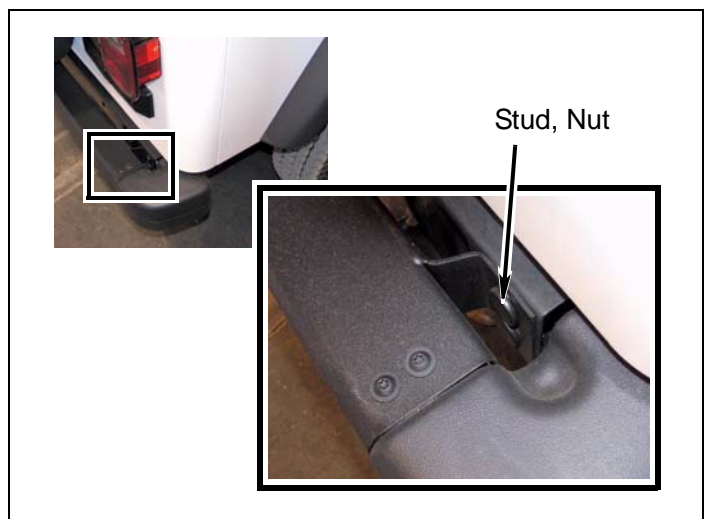


## 2. Kit bumper


- a. Install kit **bumper** on frame with four kit **bolts** (3/8" x 1"), kit **washers** (3/8" USS), and kit **nuts** (3/8" serrated flange) at outer holes.

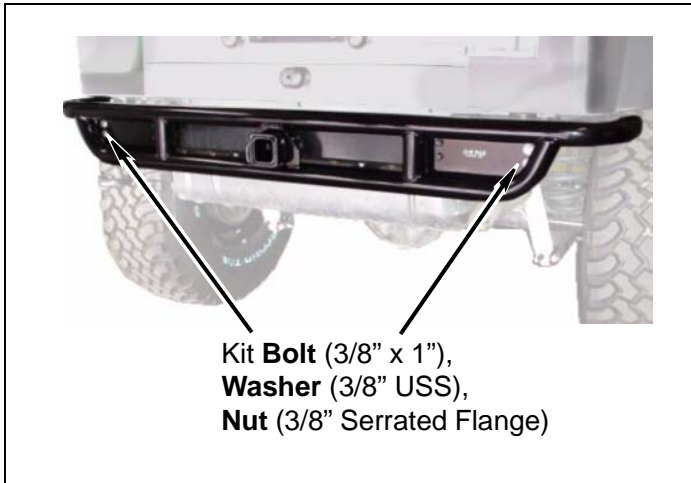

- b. **1987-97 vehicles:** In the remaining holes, secure kit **bumper** to frame crossplate with four kit **bolts** (3/8" x 1" self-tapping flange-head), kit **washers** (3/8" USS), and kit **nuts** (3/8" serrated flange).

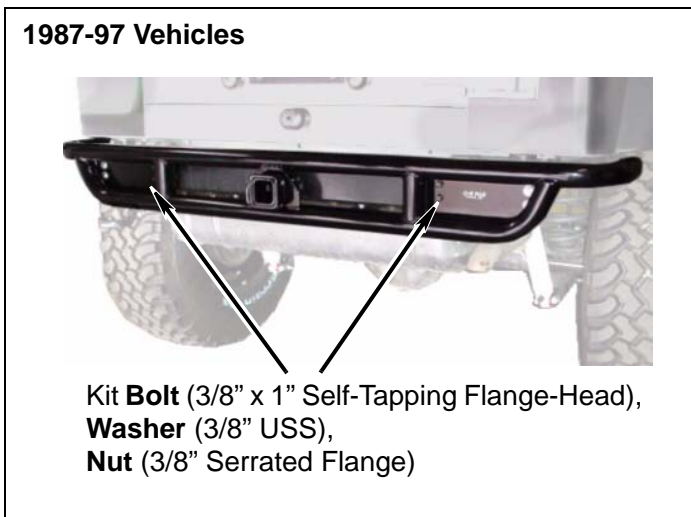

- c. **1998 and later vehicles:** Using any of the remaining holes in kit **bumper** as a template, drill four 5/16" holes in frame crossplate. Secure kit **bumper** to frame crossplate with four kit **bolts** (3/8" x 1" self-tapping flange-head) in drilled holes.

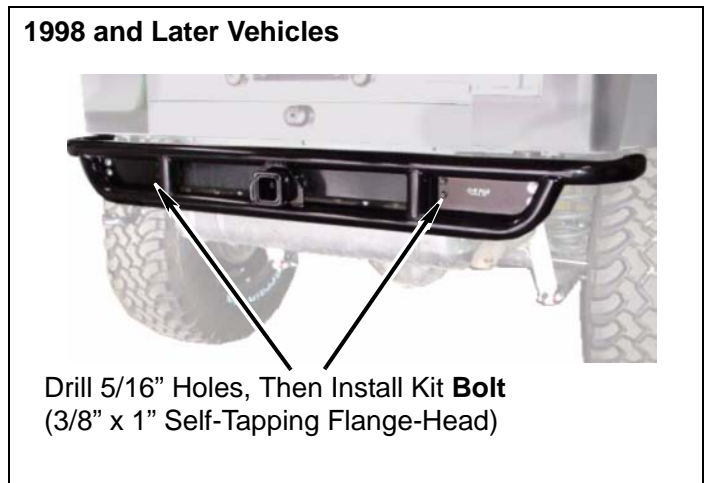

- d. Fasten tow hooks (if equipped) and kit **bumper** to bottom of frame using stock bolts.

## Accessories

The following accessories are also available:

**Kit # 83095:** Rock Slider Front Bumper (YJ)

**Kit # 83096:** Rock Slider Front Bumper  
w/ Grille Guard (YJ)

**Kit # 83200:** Rock Slider Front Bumper (TJ)

**Kit # 83201:** Rock Slider Front Bumper  
w/ Grille Guard (TJ)

**Kit # 84095:** Rock Slider Side Bars (YJ)

**Kit # 84100:** Rock Slider Side Bars (TJ)

**Kit # 84200:** Rock Slider Rocker Panels (TJ)

## Parts list

<u>Qty.</u>	<u>Description</u>
4	<b>Bolt</b> , 3/8" x 1"
4	<b>Bolt</b> , 3/8" x 1" self-tapping flange-head
1	<b>Bumper</b>
8	<b>Nut</b> , 3/8" serrated flange
4	<b>Washer</b> , 3/8" USS