



3651 N Highway 89 • Chino Valley, AZ 86323
(928) 636-7080 • www.p-a-g.net

JEEP CHEROKEE 2 & 4 DOOR ROCK SLIDER REAR BUMPER INSTALLATION INSTRUCTIONS 1984-2001 KIT# 83209

⚠ WARNING
Before you install this kit, read and understand all instructions, warnings, cautions, and notes in this instruction sheet and in the vehicle owner's manual.

⚠ CAUTION
Proper installation of this kit requires knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle. We strongly recommend that a certified mechanic familiar with the installation of similar components install this kit.

⚠ WARNING
Many states and municipalities have laws restricting bumper heights and vehicle lifts. Consult state and local laws to determine if the changes you intend to make to the vehicle comply with the law.

⚠ WARNING
Always wear eye protection when operating power tools.

⚠ WARNING
Before you install this kit, block the vehicle tires to prevent the vehicle from rolling.

NOTE
Performance Automotive Group recommends using the Loctite® supplied in the kit on the threads of all kit nuts and bolts unless specified otherwise in these instructions.

Before Starting Installation

NOTE
Kit parts are prefaced by the word *kit* and appear in **bold** print.


1. Carefully read all warnings and instructions completely before beginning.
2. Verify all parts have been received in this kit by checking the parts list at the end of this document.

NOTE
If parts are missing from kit, please be prepared to provide the following information:
1. **Name** of purchase location
2. **Bar Code** on side of box
3. **Date** above bar code
4. **Date** inside box cover
5. **Inspector #** from inside box cover

3. **Only install this kit on the vehicle for which it is specified.** If anytime during the installation you encounter something different from what is outlined in the instructions, call technical support at (928) 636-7080.
4. Park vehicle on a clean, dry, flat, level surface and block tires so vehicle cannot roll in either direction.

Engine Compartment

1. Disconnect both battery cables. Disconnect negative cable first, then positive cable.

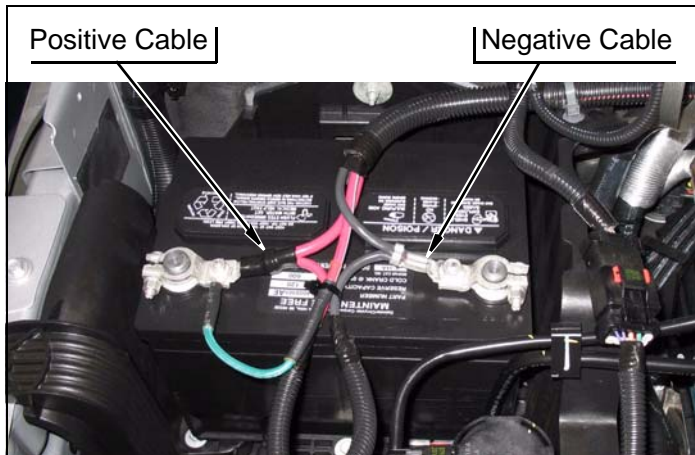


Rear Bumper

1. Remove Factory Bumper

- a. **97-Up:** Remove two bolts from corner section on bottom side of bumper. Then gently push up and remove corner section.
- b. After corner section is removed you may remove existing bracket by drilling out the rivets(1/4" drill bit) and remove bracket from rear quarter panel.



- c. **84-01:** Remove eight bolts from center section bumper brackets (right & left) at frame and remove bumper.

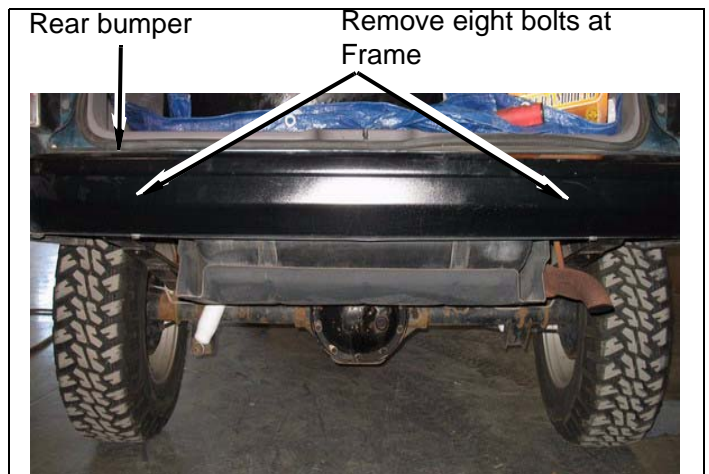

Rear mounts after bumper is removed




Prepare to Install Kit


Rear Bumper Install

1. Install Rear Bumper Bracket and Anchore Strap.

- a. Install eight factory bolts in to supplied right and left brackets (**Note:** Notched ends will face towards inside of vehicle).

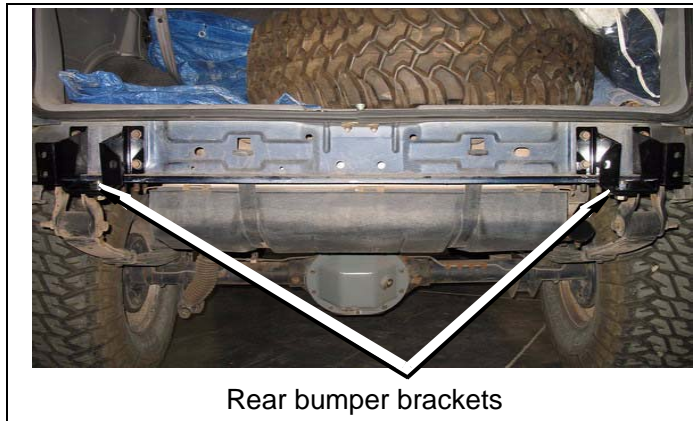


- b. Install **Nut Plate**(Two nuts weld on a plate) into frame rail through access hole in frame. Using supplied hardware(Four $1/2$ " bolts, washers and two flange nuts) to install **Anchore Strap** on drivers side frame mount & bracket. Align and tighten all bolts(**Note:** Each vehicle may vary due to added accessories. **91' & older models will requier you to mark & drill $1/2$ " holes to tie in the anchore straps to the frame).** Repeat to passanger side.

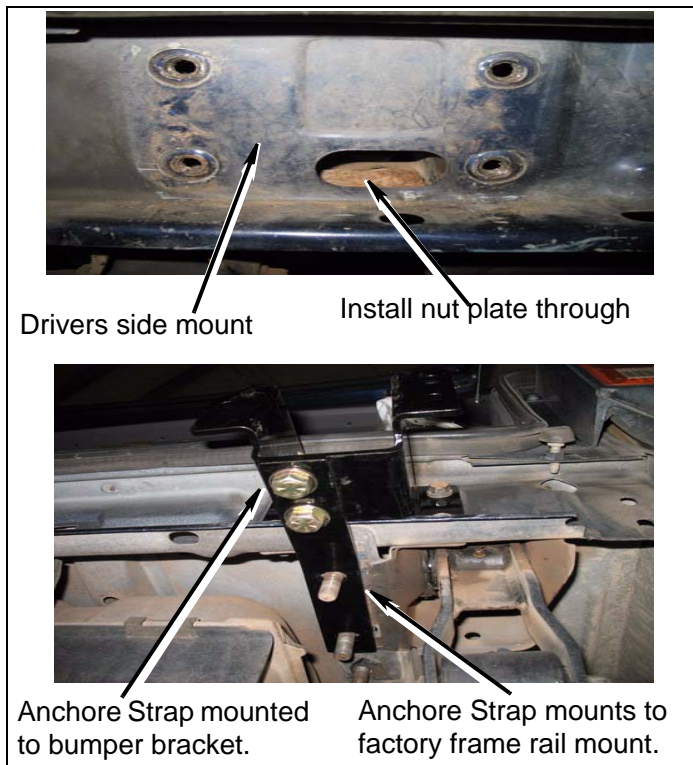

Rear Bumper Assembly

1. Assemble rear bumper.


- a. Install kit corner (driver) to kit bumper (center) with three bolts ($1/2$ "), three washers($1/2$ "), and three flange nuts ($1/2$ "). Center the corner, and tighten bolts..

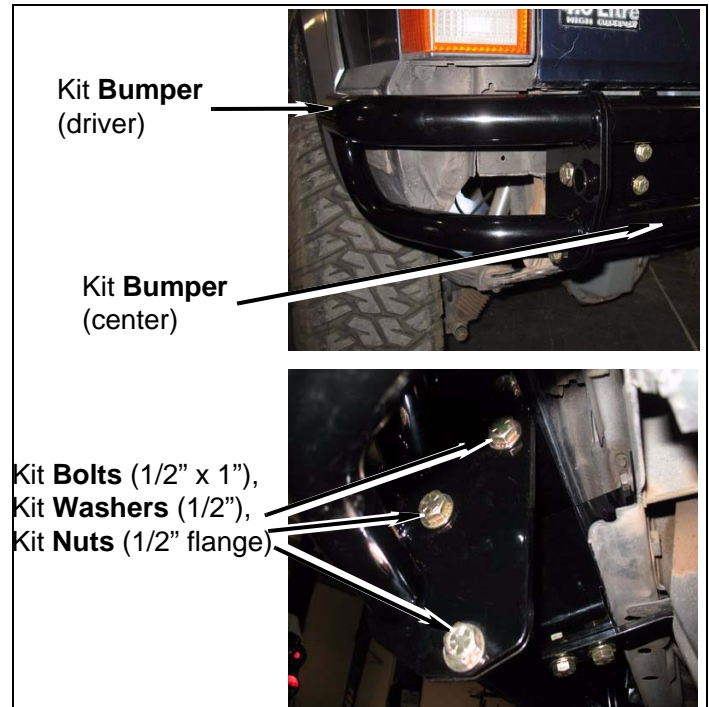

Repeat to passenger side.

2. Install kit bumper on vehicle.


- a. Place rear bumper up to mounts, align mounting holes. Use six ($7/16$ " ,bolt, washer, & flange nut) mounting hardware secure bumper to mounting brackets.

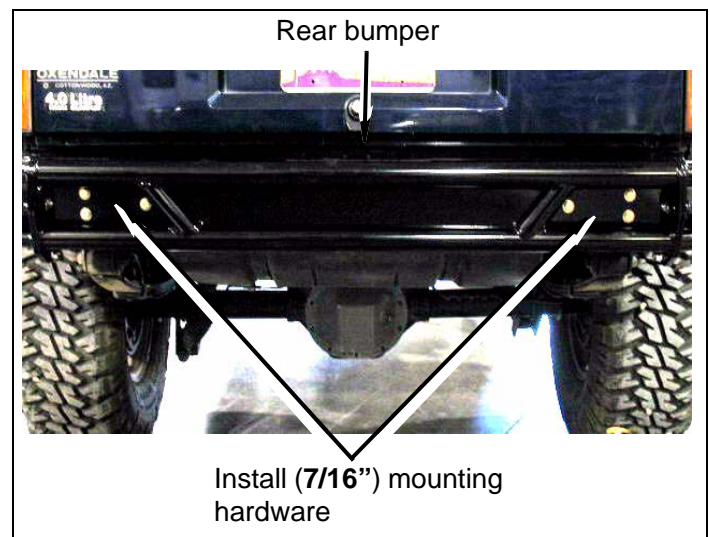

3. **Align and Center bumper** assembly(Be sure that rear hatch clears bumper), tighten all six mounting bolts.

Engine Compartment

1. Connect both battery cables. Connect positive cable first, then negative cable.

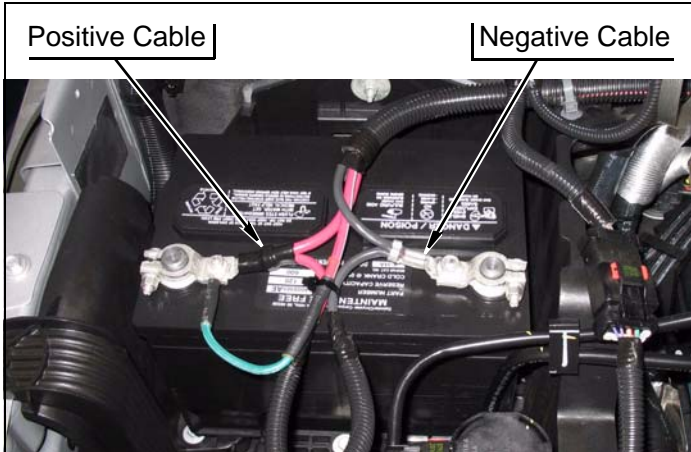

Miscellaneous

1. Check all fasteners to ensure they are tight..

⚠WARNING

Retorque all fasteners after 500 miles and after off road use. All body lift components should be visually inspected and fasteners retorqued during routine vehicle servicing.

NOTE

All warranty information, instruction sheets, and other documents regarding the installation of this product must be retained by the vehicle owner. Information contained in the instructions and on the warranty card will be required for any warranty claims. The vehicle owner needs to understand the modifications made to the vehicle and how they affect vehicle handling and performance. Failure to provide the customer with this information can result in damage to the vehicle and severe personal injury.

⚠WARNING

OR-Fab *strongly* recommends NOT using the Rock Slider Bumper for any pulling, anchoring or towing due to the Jeep Cherokee unit body structure. Although it is anchored, overloading may cause personnel injury as well as damage to the vehicle. *PLEASE USE RESPONSIBLY!*****

Kit Parts List

Qty. Description

1	Bumper , Main Center - Rear
1	Bumper , Corner Left - Rear
1	Bumper , Corner Right - Rear
1	Mount , Left - Rear
1	Mount , Right - Rear
2	Anchore Strap , Rear
2	Cap , Domed End - Urethamer
2	D-Ring
1	<u>83209BAG (Hardware bag kit)</u>
6	Bolt , 7/16" x 1 1/4"
14	Bolt , 1/2" x 1 1/4"
2	Bracket , Nut Plate
6	Nut , Flange 7/16"
10	Nut , Flange 1/2"
6	Washer , 7/16" Hardened
14	Washer , 1/2" Hardened